




pingStation 2

User and Installation Guide

REVISION A

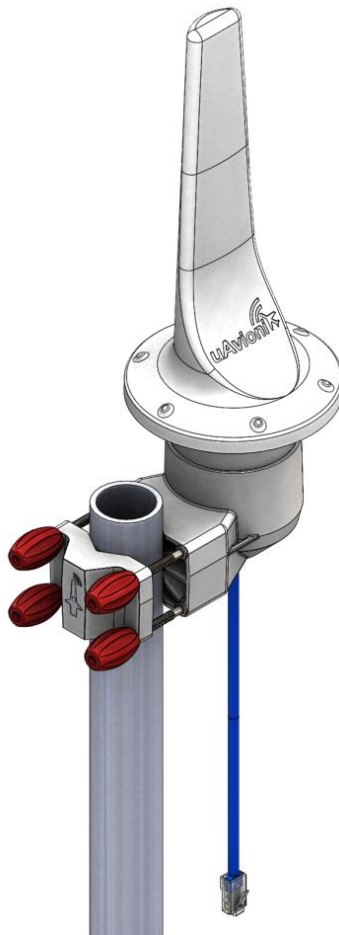

© 2021 uAvionix Corporation. All rights reserved.

uAvionix Corporation

300 Pine Needle Lane

Bigfork, MT 59911

<http://www.uavionix.com>

<http://www.uavionix.com/support>

Except as expressly provided herein, no part of this guide may be reproduced, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of uAvionix. uAvionix grants permissions to download a single copy of this guide onto an electronic storage medium to be viewed for personal use, provided that the complete text of this copyright notice is retained. Unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

uAvionix® is a registered trademark of uAvionix Corporation, and may not be used without express permission of uAvionix.

1 Revision History

Revision	Date	Comments
A	11/23/2020	Initial release

2 Warnings / Disclaimers

All device operational procedures must be understood prior to operation. uAvionix is not liable for damages arising from the use or misuse of this product.

3 Limited Warranty

uAvionix pingStation 2 products are warranted to be free from defects in material and workmanship for one year from purchase. For the duration of the warranty period, uAvionix, at its sole option, will repair or replace any product which fails under normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost.

This warranty does not apply to cosmetic damage, consumable parts, damage caused by accident, abuse, misuse, water, fire or flood, damage caused by unauthorized servicing, or product that has been modified or altered.

IN NO EVENT, SHALL UAVIONIX BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Warranty Service

Warranty repair service shall be provided directly by uAvionix.


4 Contents

1	Revision History.....	3
2	Warnings / Disclaimers.....	4
3	Limited Warranty.....	5
5	Introduction.....	7
6	Installation.....	8
6.1	Mechanical Mounting Recommendations.....	8
6.2	Connection to the POE network.....	10
7	Configuration.....	11
7.1	Install.....	11
7.2	Configuration URL.....	12
7.3	Connect.....	13
7.3.1	Configuration Items.....	14
7.3.2	Health Statistics.....	15
8	Update.....	16
8.1	Update the pingStation 2 system software.....	16
8.2	Update ADS-B receiver software.....	18
9	Virtual Radar Server Receiver.....	20
9.1	Configure pingStation 2.....	20
9.2	Configure Virtual Radar Server.....	22
9.3	Configure Virtual Radar Moving Map Home Location.....	25
10	Support.....	28

5 Introduction

pingStation 2 is a dual band (978MHz and 1090MHz), networkable ADS-B receiver with a Power-Over-Ethernet (POE) interface enclosed in an IP67 rated protective enclosure. pingStation 2 provides ground surface or low-altitude ADS-B surveillance within line of sight of the antenna, with range dependent upon the output power of the transmitting ADS-B transceiver. pingStation 2 is robust enough to be permanently mounted outdoors in harsh environmental conditions, and small enough to be used as a mobile asset for roaming operations. Installation is simple with included pole-mount bracket, and a single POE cable which provides both power and data communications. Configuration is accomplished via a simple web interface. An integrated GPS provides precision timestamping for messaging.


Multiple pingStation 2's may be networked together to provide a wide area low-altitude surveillance volume. Data messages are in JSON format as described within the pingStation 2 ICD (UAV-1005006-001).

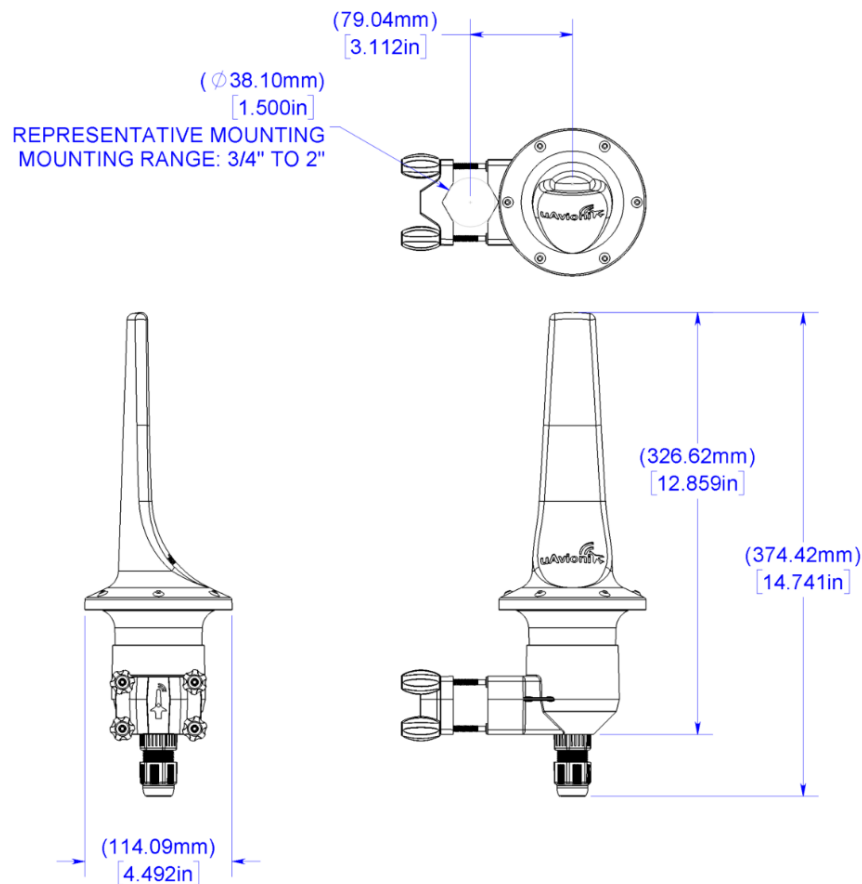


6 Installation

6.1 Mechanical Mounting Recommendations

pingStation 2 is supplied with a clamping bracket to mount to poles with outside diameters from $\frac{3}{4}$ " up to 2", inclusive. The clamping bracket is pre-assembled and can easily be slipped over the top of the pole. If the top of the pole is obstructed, the knobs and clamp block may be removed and then reinstalled around the pole as shown below. Mount pingStation 2 as high on the pole as possible, preferably at the top with an unobstructed 360° view of the sky. Install the knobs evenly until all four have made light contact with the clamp block. Finally, tighten the knobs firmly using fingers only. For convenience, the knobs may be reversed to reduce the number of turns necessary to tighten the clamp. Simply orient the knob with the brass insert as shown below to make this possible.

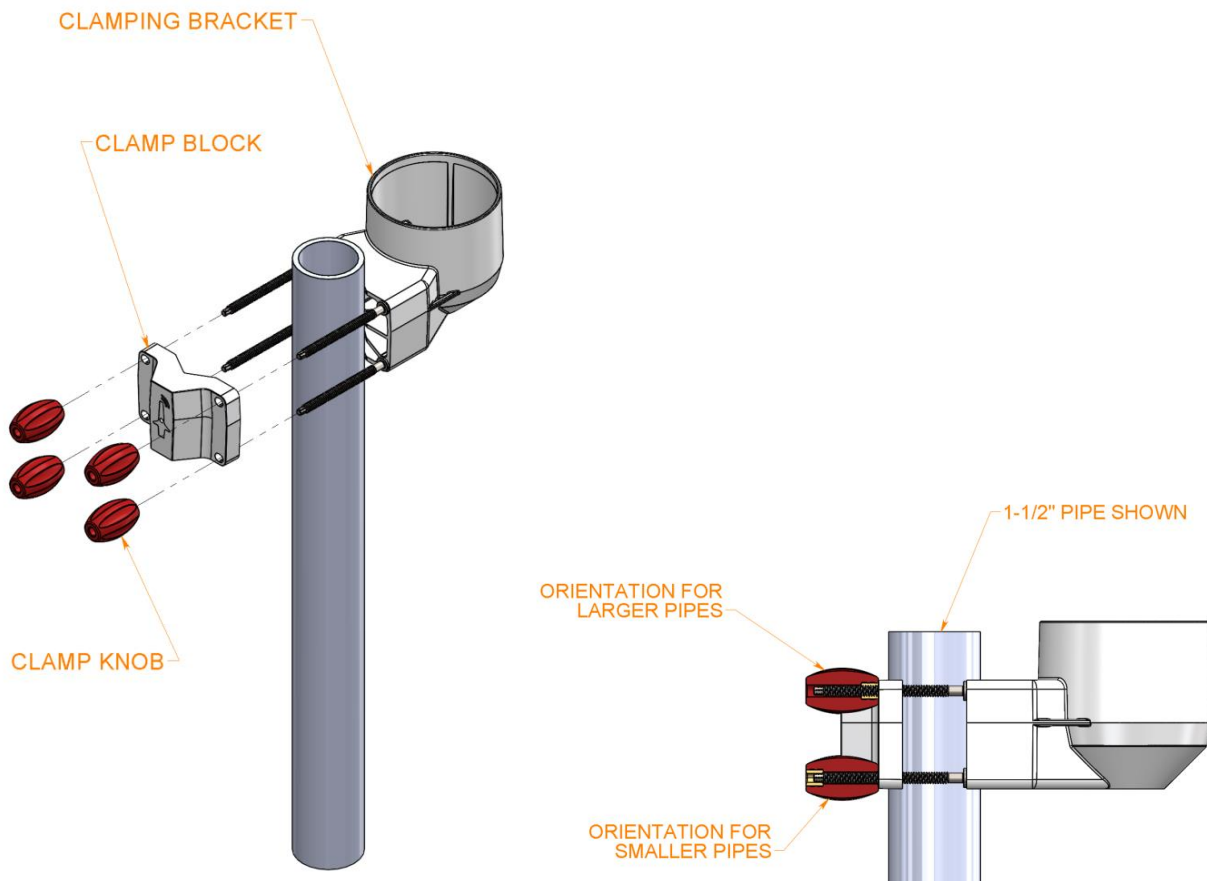

Firmly seat the pingStation 2 unit all the way to the bottom of the clamping bracket cup. Connect the pingStation 2 using Cat5e or better ethernet cable. You may wish to use shielded Cat5e cable to protect against EMI interference depending on your installation location. Ensure that the RJ45 plug is terminated using the same configuration as the other end connecting to the POE switch or POE injector (T-658A or T-568B). Pass cable through the compression nut, cable seal, compression sleeve, and the connector seal. Seat RJ45 plug into the pingStation 2 RJ45 receptacle then install and tighten the compression sleeve to the bottom of the receptacle with the red connector seal in place at the top of the connector main body as shown. **Note: the warranty is void if installed outdoors without this seal.** Push the cable seal into the compression sleeve and install and tighten the compression nut. If necessary, place a hand on the pingStation 2 to prevent unseating from the bracket cup.

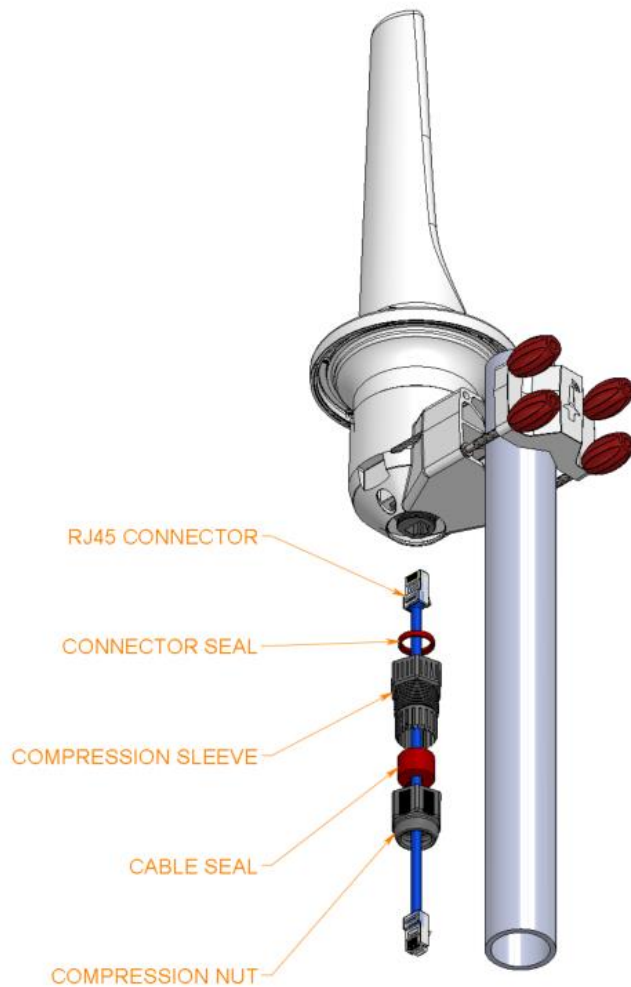


6.2 Connection to the POE network

pingStation 2 is compatible with existing POE 803.3af standard (Power Class 0) and 802.3af Ethernet cabling. Any POE switch, injector, or cable conforming to these standards should be interoperable with pingStation 2.

POE Specifications:

Parameter	Value
Standard	803.3af (802.3at Type1)
Maximum power	15.4W
Voltage Range	37 – 57V
Maximum Current	350mA
Maximum Cable Resistance	20Ω
Supported Cabling	Shielded Cat 3 and Shielded Cat 5
Supported Modes	Mode A (endspan), Mode B (midspan)
Power Management	Power Class 0
Maximum Cable Length	100 meters

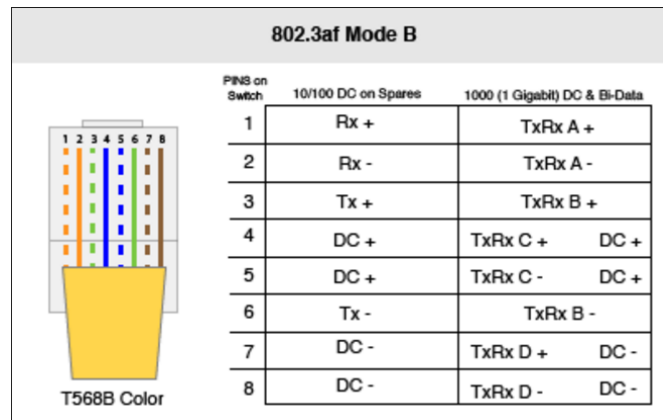


Caution!

Absolute maximum DC voltage +57 V. A higher DC voltage value will permanently damage the equipment!


7 Configuration

7.1 Install

Connect the shielded POE cable to an active POE switch or a regular switch via a Class 0 POE power injector as shown below.

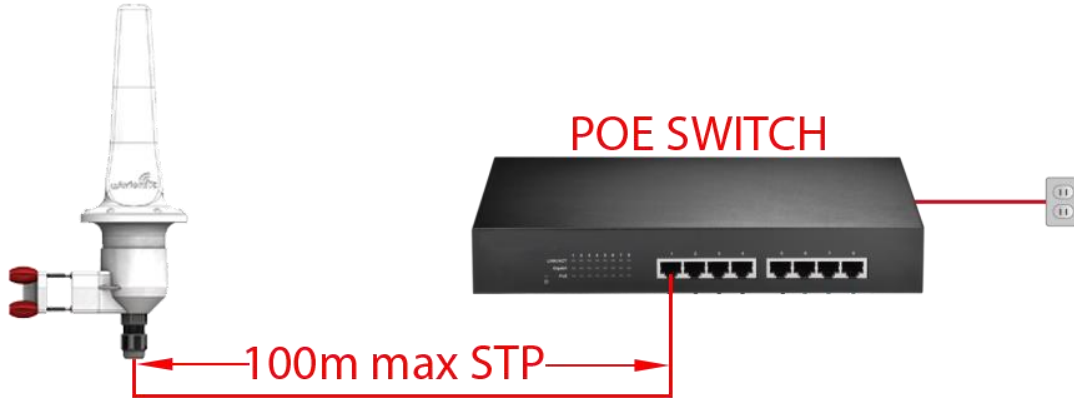

pingStation 2 install with POE switch

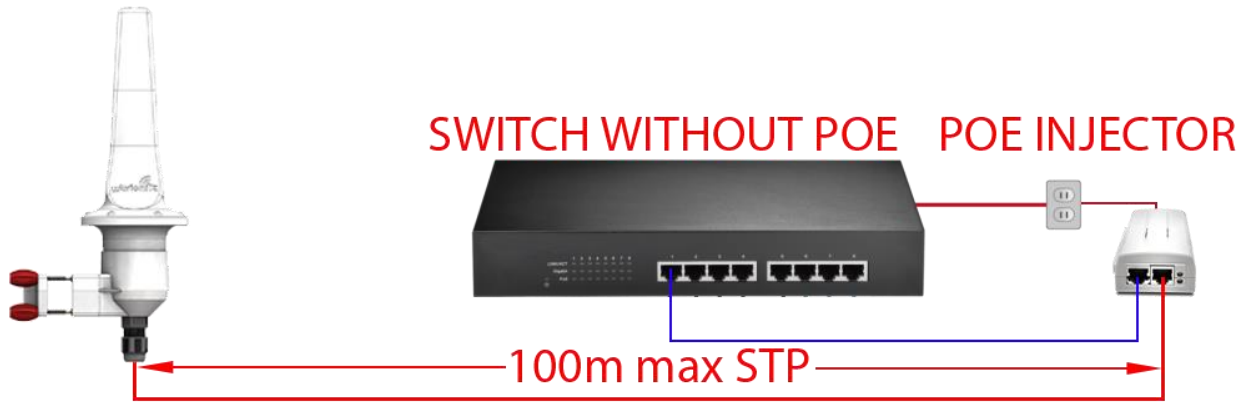

pingStation 2 install with POE injector

At power-up an IP address will be assigned to the pingStation 2 by the local DHCP server. This IP address is dynamic and assigned by your local network. Determining the assigned IP address is required for configuration. The pingStation 2 IP address can be determined by accessing the local DHCP server and reviewing the connected devices or by using industry accepted network scanning tools.

Directions for each DHCP server, router, or network scanning tool differ. Refer to the instruction manual for these devices or tools to help determine the IP address assigned

to the pingStation 2. The MAC address for each pingStation 2 can be found on the device housing.

Note: Any IP addresses shown in this document are examples only, and are not applicable to your pingStation 2 IP address.

Optional: You may wish to configure your DHCP server to reserve an IP address for pingStation 2 in order to ensure its address does not change in the future. Refer to your router or DHCP server instructions for how to reserve IP addresses.

7.2 Configuration URL

pingStation 2 settings can be observed and changed by navigating via web browser from a PC or mobile device which is on the same Local Area Network (LAN) as the powered pingStation 2. The IP address assigned by the DHCP server serves as the base URL.

pingStation 2 base URL:

`http://###.###.###.###/`

Note “###.###.###.###” is the IP address of the device

Displays Health statistics, position and version information. Use to program the target UDP address and Port number.

pingStation 2 status URL:

`http://###.###.###.###/api/v1/status`

Displays the status json sentence/

pingStation 2 traffic URL:

`http://###.###.###.###/api/v1/traffic`

Displays the current traffic json sentences.


pingStation 2 update URL:

`http://###.###.###.###/update`

Provides ability to update firmware.

7.3 Connect

The base URL displays configuration items as well as dynamic pingStation 2 statistics.



Configuration

Output Formats: UDP JSON TCP Compressed VR

UDP Target IP Address or Hostname:

UDP Target Port:

TCP Push IP Address or Hostname:

TCP Port:

Altitude Ceiling In Feet: (0 = No Filter)

Max Radius In Miles: (0 = No Filter)

Station Info Interval In Seconds:

Static IP Address: (0.0.0.0 for DHCP)

Subnet Mask:

Gateway IP Address:

DNS Address:

Health

UAT Basic: 0
UAT Long: 0
1090 DF17: 29035
1090 DF18: 897
Current Aircraft: 12
GPS Fix Type: 3
GPS Satellites: 9

Latitude: 42.028481 Longitude: -91.717628
Receiver BPS: 921600 GPS BPS: 115200
Version: 1.0.28

[About / Copyrights](#)

7.3.1 Configuration Items

Configuration Item	Description
Output Formats	The supported delivery formats. Either or both options can be selected.
UDP JSON	Aircraft data will be JSON formatted and pushed out a UDP pipe to the UDP target address on the UDP target port.
TCP Compressed VR	Aircraft data will be Compressed VRS formatted and delivered to a TCP for use with Virtual Radar Server.
UDP Target IP Address or Hostname	The IP address or hostname of the UDP listener on the server.
UDP Target Port	The port number the UDP listener is listening on.
TCP Push IP Address or Hostname	The IP address or hostname that we will be sending TCP data to
TCP Port	<p>If TCP Push IP Address or Hostname is valid this will be the port that we will connect to deliver the compressed VRS tracking data to the push receiver on the other end of the connection.</p> <p>If TCP Push IP Address or Hostname is not valid, this is the port that the TCP server will listen for incoming connections on to deliver the compressed VRS tracking data.</p>
Altitude Ceiling in Feet MSL	Entering a non-zero value will result in a filter which only returns aircraft data below the entered value in feet Mean Sea Level (MSL). Entering zero results in all aircraft data being returned.
Max Radius in Miles	Entering a non-zero value will result in a filter which only returns aircraft data within the range from the receiver's GPS position in miles specified. Entering zero results in all aircraft data being returned.
Station Info Interval In Seconds	This is the rate that the pingStation 2 information packet is returned. Mobile pingStation 2s will want a lower number in this field for more regular GPS updates. The default is once every 30 seconds.
Static IP Address	Fixed IP address number of the device which will not change. The network administrator assigns this number. Set this field to 0.0.0.0 to enable DHCP.
Subnet Mask	Mask used to the IP address into network and host address.
Gateway IP Address	Address used to send packets out of the local network.
DNS Address	This is the IP address of the Domain Name Service

When you modify any configuration item, press the Update button to store the changes. These fields are non-volatile and persist through power cycles.

7.3.2 Health Statistics


Statistic	Description
UAT Basic	The number of UAT basic aircraft messages received.
UAT Long	The number of UAT long aircraft messages received.
1090 DF17	The number of 1090 ADS-B aircraft messages received.
1090 DF18	The number of 1090 TIS-B messages received.
Current Aircraft	The number of aircraft currently being tracked. The aircraft are deprecated from the list after 60 seconds since last contact.
Current Range	The range in miles of the last processed aircraft from the pingStation 2.
GPS Fix Type	The gps fix type as follows: 0 = Not present 1 = Not locked 2 = 2D fix 3 = 3D fix 4 = Differential GPS fix
GPS Satellites	The number of satellites the pingStation 2 can currently see.
Latitude	The latitude of this pingStation 2.
Longitude	The longitude of this pingStation 2.
Receiver BPS	The communication speed to the ping receiver.
GPS BPS	The communication speed to the GPS
Version	The version of software this pingStation 2 running.

8 Update


The pingStation 2 supports software upgrades thru a web-based flashing system. The user will launch the update webpage, select a firmware binary file and press a button to start the update process. There are two separate firmware files which can be updated through this process, the system software, and the ADS-B receiver software.


8.1 Update the pingStation 2 system software


The update process is started by launching `http://###.###.###.###/update`.

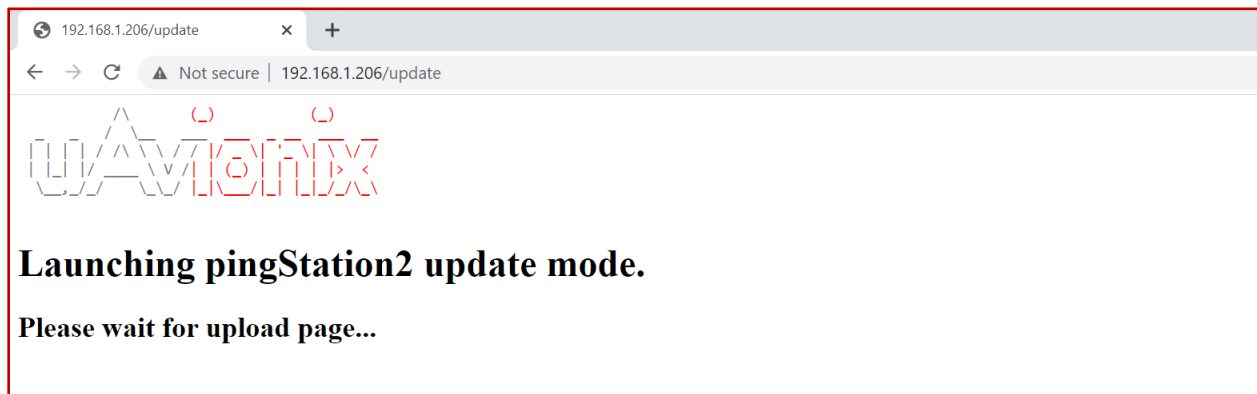


Choose the file to upload by pressing the “Choose File” button.

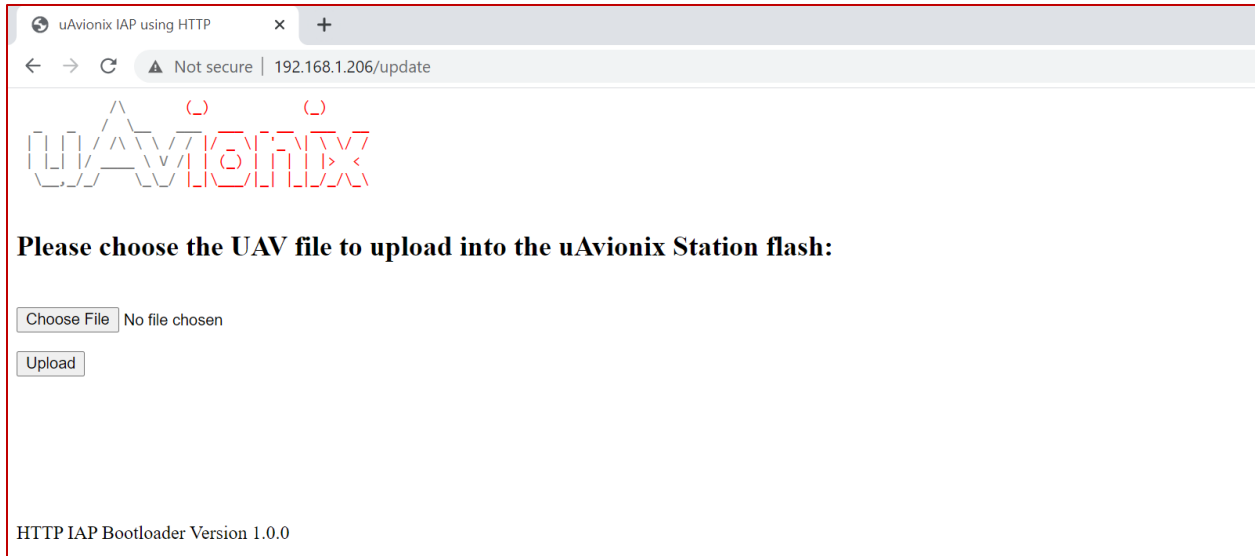

Press  to start the upgrade process. There will be an update % status at the bottom of the page.

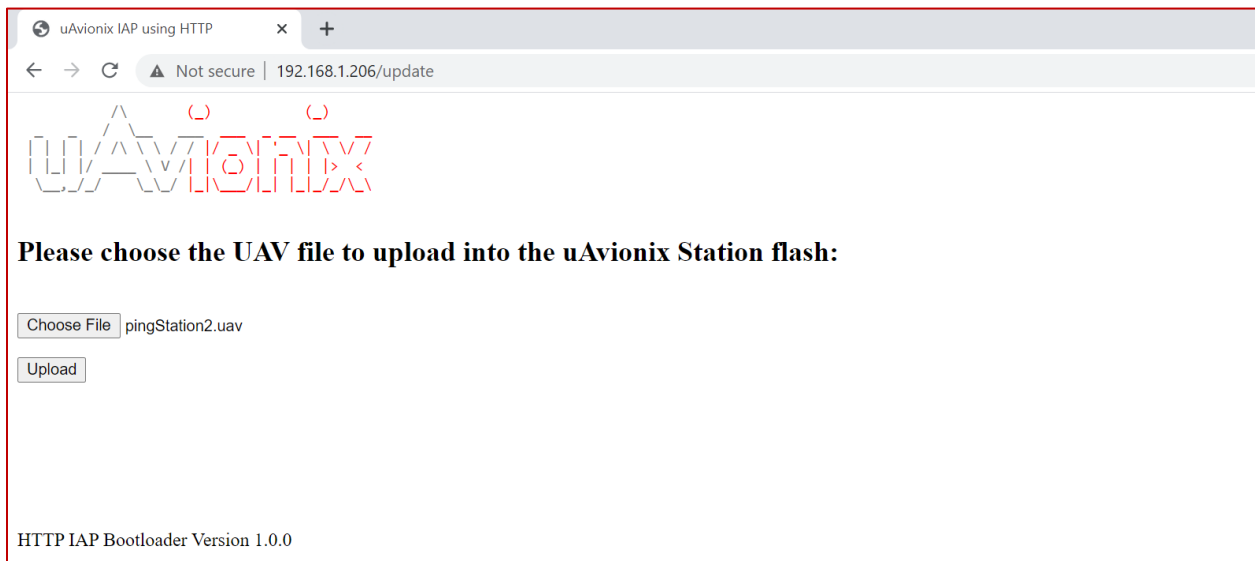

When the upgrade is complete the pingStation 2 will reset.

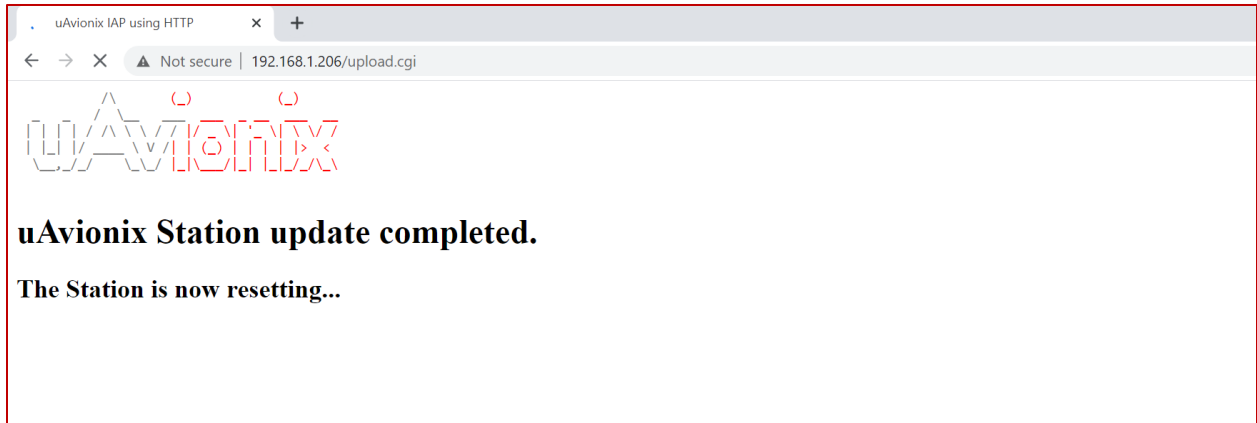

8.2 Update ADS-B receiver software


The pingStation 2 system software supports in field updating of the ADS-B receiver software.

From the pingStation 2 configuration page <http://###.###.###.###/> select the “Update” link in line with the ADS-B Version report, or access the updater directly at <http://###.###.###.###/pingUpdate>

Latitude: 48.091732 Longitude: -114.105011
Receiver BPS: 921600 GPS BPS: 115200
Version: 1.1.5
ADS-B Version: 2.4.36 [Update](#)

[About / Copyrights](#)

From the pingUpdate page select “Choose File” and select the latest receiver software. V2.4.43 is shown as an example.

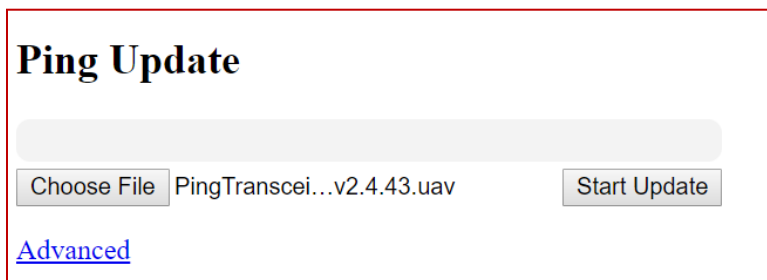

Select “Start Update”

The progress bar will cycle during the update. At completion the updater will report the status of the update. The status will report “Update Complete” if successful.

Ping Update

Update complete.



PingTranscei...v2.4.43.uav

[Advanced](#)

Return to the pingStation 2 configuration page <http://###.###.###.###/> and verify the receiver version matches the version uploaded.

UAT Basic: 0
UAT Long: 7878
1090 DF17: 1267
1090 DF18: 2674
Current Aircraft: 141
GPS Fix Type: 3
GPS Satellites: 12

Latitude: 48.091732 Longitude: -114.105049
Receiver BPS: 921600 GPS BPS: 115200
Version: 1.1.5
ADS-B Version: 2.4.43 [Update](#)

[About / Copyrights](#)

9 Virtual Radar Server Receiver

One option for displaying traffic received by pingStation 2 is through the use of open-source Virtual Radar Server (VRS) software. VRS is not a uAvionix product.

This is an example of creating a Virtual Radar Server receiver that will render the Compressed VRS data from the pingStation 2 on a local LAN VRS installation.

9.1 Configure pingStation 2

Open the pingStation 2 setup screen by visiting the pingStation 2 IP address using a web browser.

Enable the TCP Compressed VR output

Enter an IP Address or hostname i.e.192.168.0.200 or vrs.uavionix.com

Enter the TCP port i.e. 30003

Click Update



Configuration

Output Formats:

UDP JSON TCP Compressed VR

UDP Target IP Address or Hostname:

UDP Target Port:

TCP Push IP Address or Hostname:

TCP Port:

Altitude Ceiling In Feet: (0 = No Filter)

Max Radius In Miles: (0 = No Filter)

Station Info Interval In Seconds:

Static IP Address: (0.0.0.0 for DHCP)

Subnet Mask:

Gateway IP Address:


DNS Address:

9.2 Configure Virtual Radar Server

Download and install Virtual Radar Server from:


<http://www.virtualradarserver.co.uk/>

1. Open Virtual Radar Server
2. Select *Tools > Options*
3. Select *Receiver Locations*
4. Click the + (plus sign)

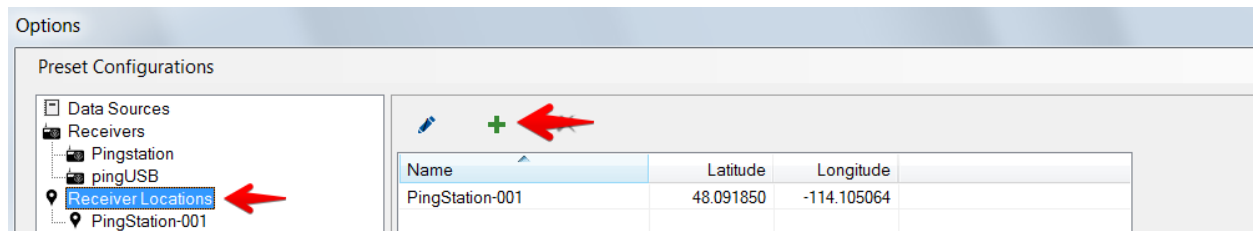

5. Enter a name for the receiver
6. Enter the latitude and longitude
7. Click *OK*

Note: Receiver latitude and longitude are available from the pingStation 2 webpage

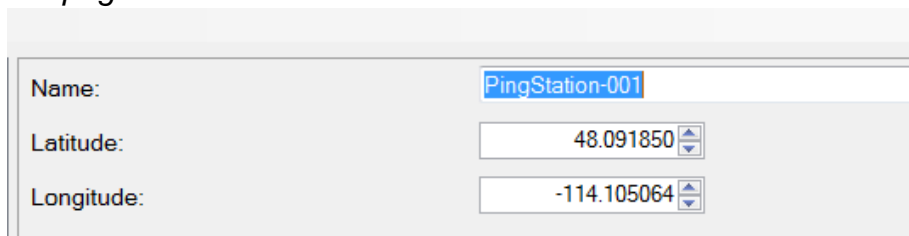


Name:


Latitude:

Longitude:

8. Select *Receivers* and click the + (plus sign).

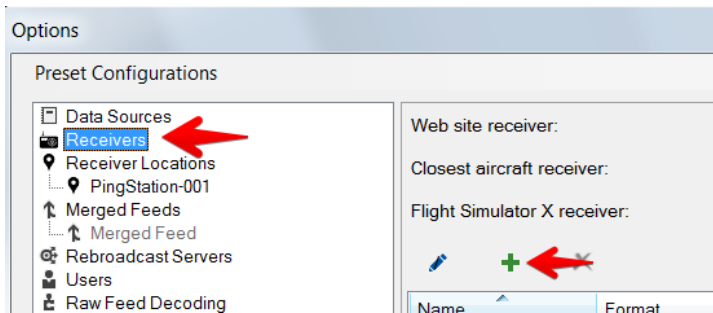

9. Configure a receiver as shown below:

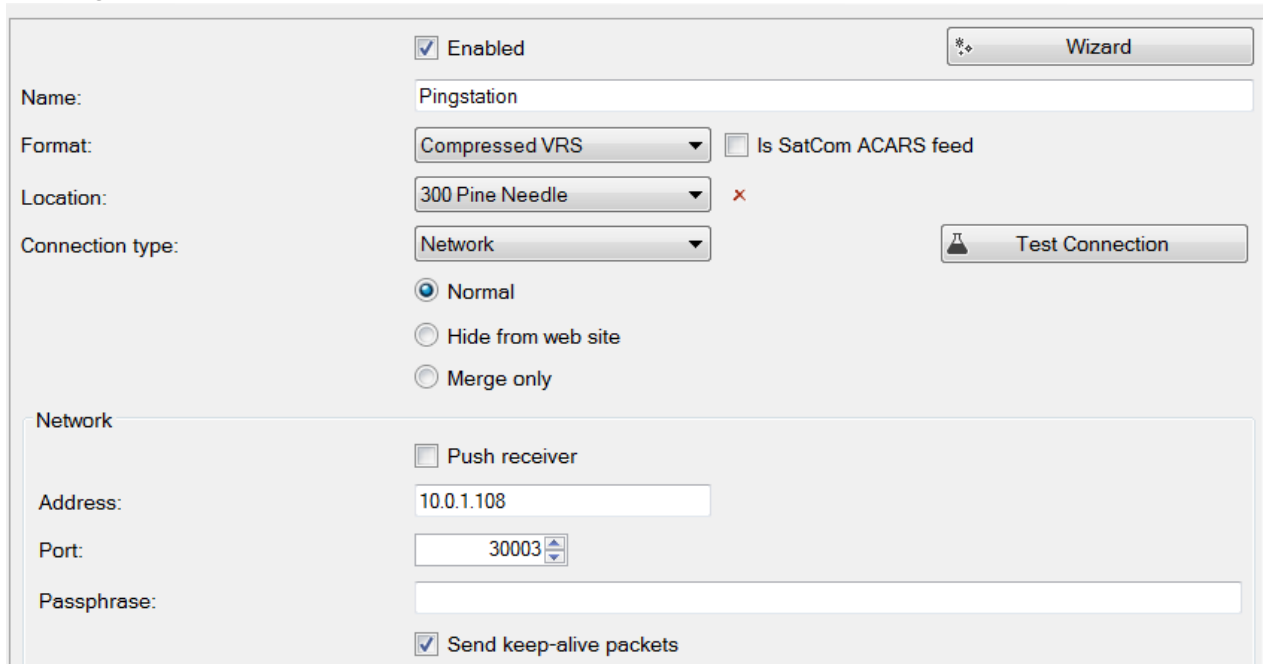

Enable: Select *Enabled*
 Name: Enter a name for the receiver
 Format: *Compressed VRS*
 Location: Choose the receiver location from the dropdown

Connection Type: Network

Push Receiver: Use to have the pingStation 2 create the TCP connect

Or

Address: Enter pingStation 2 IP address to TCP connect

Port: Enter the same TCP port as pingStation 2 setup

Send Keep-alive: Select *Enabled*

Click OK

10. After setup verify that the Virtual Radar Server shows a *Connected* status and that the message counter is increasing. Note that you may be required to have traffic before the state will change to *Connected*.

The screenshot shows the Virtual Radar Server application window. The 'Web server status' section indicates the server is online. The 'UPnP support' section shows it is not enabled. Below this is a table of recent requests. The 'Feed status' section contains a table with the following data:

Name	Connection Status	Total Messages	Bad Messages	Aircraft Tracked
Pingstation	Connected	360	0	7


A red arrow points to the 'Aircraft Tracked' value of 7 for the 'Pingstation' entry. The 'Rebroadcast server status' section shows the configuration is set to 'None' and includes an empty table with columns for Name, IP Address, Port, Bytes Buffered, Bytes Sent, and Bytes Discar...


9.3 Configure Virtual Radar Moving Map Home Location

1. To view the aircraft on a moving map open a browser to your Virtual Radar installation. The default address is:

<http://127.0.0.1/VirtualRadar>

A clickable hyperlink to the page is located on the Virtual Radar Server window.

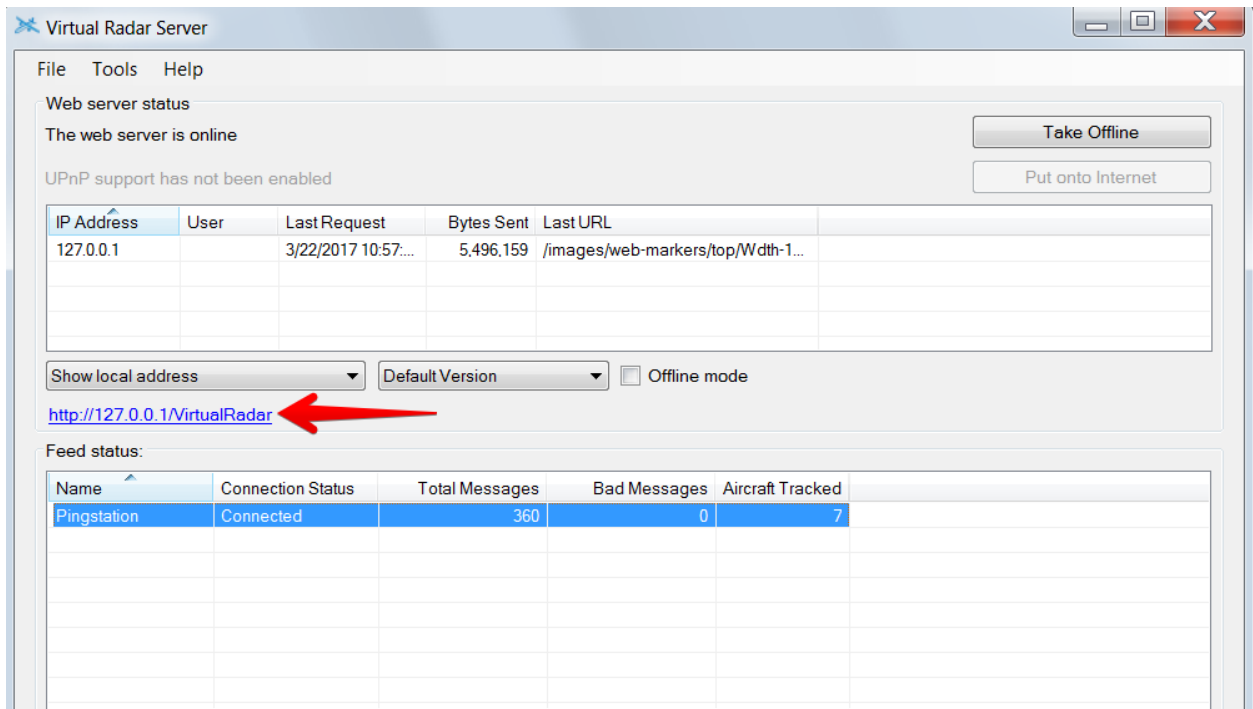

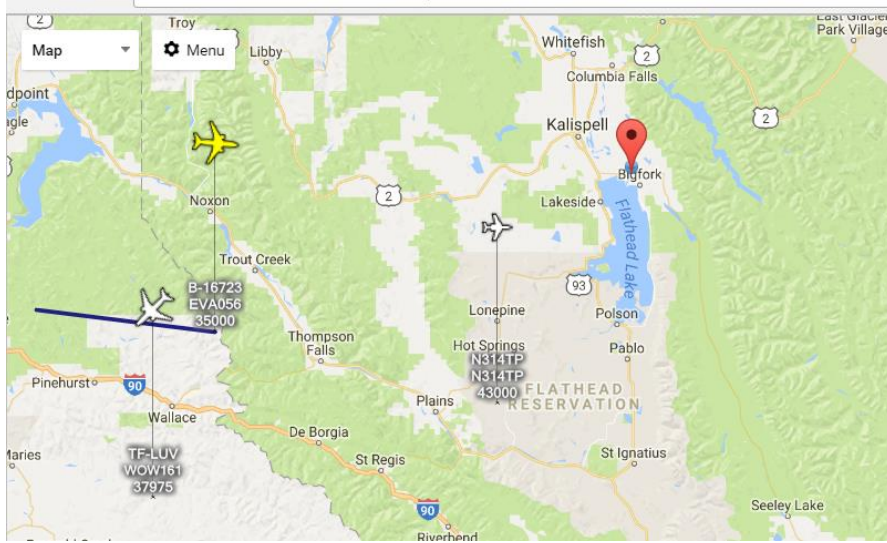

2. From the Virtual Radar webpage click *Menu > Options*
3. Select the *General* tab
4. Select *Set Current Location*
5. Click the *X* (close)

Options

General Map Aircraft List Filters

Data Feed

Update interval (secs): 1

Hide aircraft not on map

Current Location

To set your current location click "Set current location" and drag the marker.

Set current location

Use GPS location

Show current location (48.09121 / -114.10379)

Units

Show vertical speed per second

Show altitude type

Show vertical speed type

Show speed type

Show heading type

Use pressure altitude

Distances: Nautical Miles

Heights: Feet

Speeds: Knots

Pressures: Inches of Mercury

Flight level transition altitude: 18,000 Feet


Flight level height unit: Feet

Audio

Announce details of selected aircraft

Only announce details of auto-selected aircraft

6. Click and drag the red location icon to your location on the map.

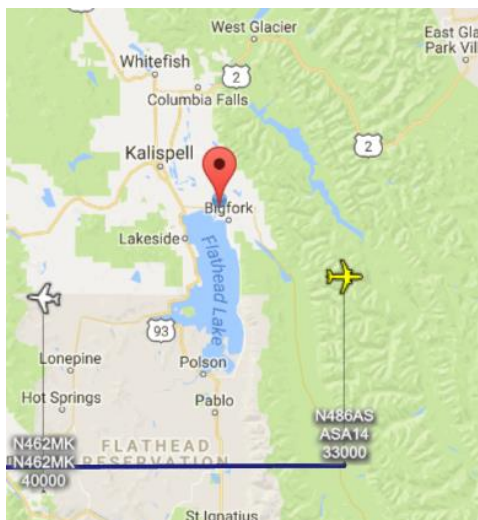

For Virtual Radar Server documentation visit:

<http://www.virtualradarserver.co.uk/>

10 Support

For support with pingStation 2 visit <http://uavionix.com/support/>